
1. Front Body (Front Body, installation on the outside of the door)



4. Main Body (Main Body, installation on the inside of the door)

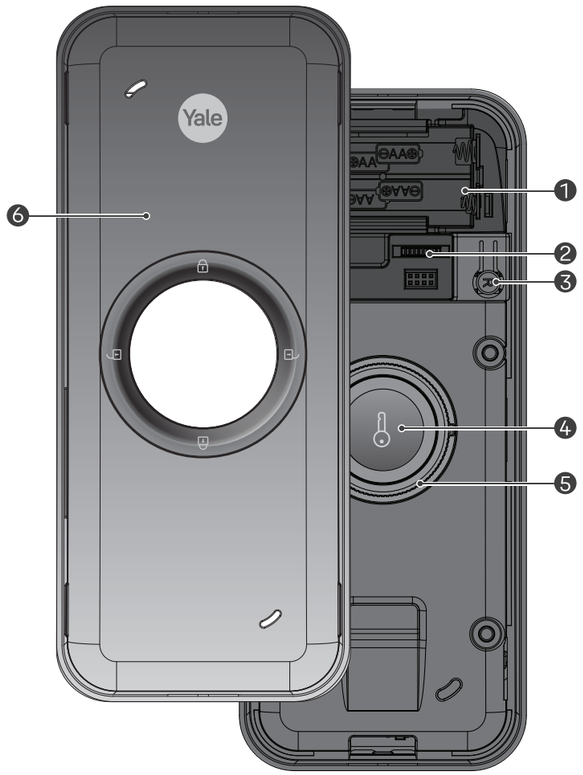

7. Setting Menu

	Touch the Keypad of the Front Body with your palm to begin
*	Press * button on the Keypad
#	Press # button on the Keypad
Ⓡ	Press Ⓡ (Registration) button in every steps to start or complete the session
F	Enter User Fingerprint (Up to 100 Users)
CARD	Enter User RFID Key Tag (Up to 100 Users)
U PIN CODE	Enter User Code (6 digits Only) The User code is used for unlocking the lock. (Up to 100 Users)
A PIN CODE	Enter Administrator Code (6 digits Only) The Administrator code is required for setting up the features.
O PIN CODE	Enter One-time Code (6 digits Only) The One-time code is used for unlocking the door lock. It will be automatically deleted once it is used.
UN	User Slot Number (2 digits only) '01' for user slot number 1, '02' for user slot number 2. '00' for user slot number 100
	Rotation area to add more features.

9. Advanced Mode

1. The ByYou series smart lock operates under Advanced mode only.
2. Advanced mode is a mode in which only the administrator can set the door lock and provide access to other users. 100 users passwords, 100 users RFID key tags, 100 users fingerprint and individual registration and deletion of one-time passwords enable efficient management of visitors.
3. Kindly ensure the secure storage of the administrator code. In the event of its loss, a factory reset (hard reset) is required.
   (Please contact our customer service for more information)

1 → 14 (Registration process) * Continue / Ⓡ Complete


	1	2	3	4	5	6	7	8	9	10	11	12	13	14
Register Administrator Code (Use during initial registration or after a factory reset)														
Registration	Ⓡ	A PIN CODE	#	A PIN CODE	#									
		New		Again										
Changing of Administrator Code — Only 1 User														
Registration	A PIN CODE	Ⓡ	1	#	A PIN CODE	#	A PIN CODE	#	*	OR Ⓡ				
					New		Again							
User Code — Up to 100 Users														
Registration	A PIN CODE	Ⓡ	2	#	1	#	UN	#	U PIN CODE	#	*	OR Ⓡ		
Delete					3	#	UN	#	*	OR Ⓡ				
Fingerprint — Up to 100 Users														
Registration	A PIN CODE	Ⓡ	3	#	1	#	1	#	UN	#	F	#	*	OR Ⓡ
											8times			
Delete							3	#	UN	#	*	OR Ⓡ		
RFID — Up to 100 Users														
Registration	A PIN CODE	Ⓡ	3	#	2	#	1	#	UN	#	CARD	#	*	OR Ⓡ
Delete							3	#	UN	#	*	OR Ⓡ		


2. Basic Contents

Basic Contents


Front Body


Main Body

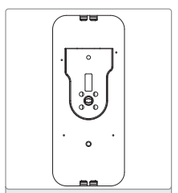
Main Bracket

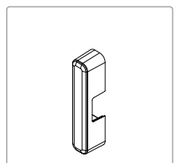
Striker Plate

- User Guide
- Installation Guide
- Screws
- RFID Key Tags x4
- Mechanical Key x3
- AA Battery x4

Optional Accessories

- Remote Controller
- Zigbee/Z-Wave Module

3. Specifications

Parts	Specifications	Remarks
Front Body	67.8(W)x183.6(H)x36.7(D)mm Die casting , gasket Exclusion.	Operating temperature -15~55˚C (5~131˚F)
Main Body	79(W)x193(H)x40(D) mm Plastic , Thumb turn excluding height, Gasket exclusion.	
Optional Accessories	Remote Controller, Modules, Bridge, Hub, Etc.	

※ Battery life depends on factors like usage habits, temperature, humidity, and battery quality.
※ The availability of optional accessories varies based on your country or local dealers. Contact your local dealer for details and support.

5. Front Body

1	Fingerprint Module
2	Keypad(10-key)
3	RFID Key Reader
4	Emergency Power Supply Terminal
5	Cylinder Key Hole
6	Mechanical Key

6. Main Body

1	Battery compartment (1.5V AA *4 Alkaline batteries)
2	Module Accessory Slot (Optional)
3	Ⓡ Registration button
4	Open & Close button / Internal Forced lock button
5	Manual Thumb Turn Knob
6	Battery cover

8. Product Features

One Touch Fingerprint Access
A single touch unlocks with your unique fingerprint, ensuring both top-tier security and swift entry.

Yale Home App
Control everything and feel confident about the safety of your loved ones and belongings, wherever you are, with a simple touch on your smartphone .

One-Touch Relock
A single touch of your palm on the keypad to lock the door.

3 minute Lock Out Feature
After five (5) unsuccessful attempts of an invalid code or fingerprint, lock out mode is activated for 3 minutes.

Smart Etiquette (Silent Mode)
Activate silent mode to unlock the product silently (voice notification muted).

Fake PIN Code
Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

Internal Forced Lock
It is a security-enhancing function that 'disables' authentication methods such as passwords and fingerprints from outside when setting up functions indoors.


External Forced Lock
It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.

Voice Guidance
Effortlessly directs you through enabling different features and settings, ensuring an even simpler and more convenient user experience.

Other features and Benefits
- Remote Controller (Optional):
  Conveniently unlock the doors from home.
- Network Module/Controller (Optional):
  Enables seamless integration with selected smart home controllers.
- Intrusion/Tampering Alarm.
- Low Battery Alarm and Emergency Power Supply.

Onetime Code — Only 1 User, Automatically deleted after use		
Registration	A PIN CODE Ⓡ 4 #	1 # O PIN CODE # * OR Ⓡ
Delete		3 # A PIN CODE # * OR Ⓡ
Delete all credentials		
Delete	A PIN CODE Ⓡ 5 # A PIN CODE #	
Automatic Lock		
Enable	A PIN CODE Ⓡ 6 # 2 #	1 # * OR Ⓡ
Disable		3 # * OR Ⓡ
Volume Control		
High	A PIN CODE Ⓡ 6 # 3 #	1 # * OR Ⓡ
Low		2 # * OR Ⓡ
Mute		3 # * OR Ⓡ
Language Change		
Registration	A PIN CODE Ⓡ 6 # 5 #	3 English # * OR Ⓡ
		4 Taiwanese # * OR Ⓡ
Bluetooth Setting (Yale Home App)		
Registration	A PIN CODE Ⓡ 7 #	Activate Bluetooth Feature
Remote Controller — Up to 5 Users		
Registration	A PIN CODE Ⓡ 8 #	1 # UN # SET Button # * OR Ⓡ
Delete		3 # UN # * OR Ⓡ
Home Network Controller		
Registration	A PIN CODE Ⓡ 9 #	1 # Controller # * OR Ⓡ
Delete		3 # A PIN CODE # * OR Ⓡ

10. Unlock Door with Fingerprint & RFID card



Touch the panel of fingerprint area sensor using registered fingerprint for 1 second.

Fingerprint validation complete.

Contact registered RFID Key Tag

11. Unlock Door with Code



Palm touch → Enter the Code → Palm touch OR Enter the ✳ button

12. Unlock Door with Smart Etiquette.



Palm touch for 3sec. → Enter the User PIN Code then touch the keypad with your palm. OR Touch Fingerprint. OR Touch RFID Key Tag.

13. Unlock the door from inside



Open the open with O/C button

The door will be open, pressing the O/C button.

Open the door with Thumb-turn knob

The door will be opened by turning the Thumb Turn Knob in the opening direction.

14. Lock the door


Set the 'Automatic lock mode' (default)

5 sec


In automatic lock mode, the lock automatically locked within 5 seconds after closing the door and detecting the automatic lock sensor.

Set the 'Manual lock mode' (default)

Touch the keypad with your palm to lock immediately (Outside).



The door will be open, pressing the Open/Close button.



The door will be locked by turning the thumb turn knob in the closing direction.

15. External Forced Lock

Enable External Forced Lock : Fingerprint

Touch the fingerprint area with the registered fingerprint for 5 sec, until you hear 3 beeps.

Enable External Forced Lock : User Code



Palm touch → Enter the User PIN Code → Enter the # button for 5 Sec.

Enable External Forced Lock : RFID Key Tag

Contact RFID key tag on [RFID key reader] for 5 sec, until you hear 3 beeps.

Disable External Forced Lock

To disable the External Forced lock enter the pin code, present a registered card or unlock the door using fingerprint.
If the Thumb-turn knob is turned to open the door from inside, the alarm will sound.

16. Internal Forced Lock



Enable Internal Forced Lock

Pressing the O/C button indoors for five seconds will trigger a series of low-pitched short sounds three times, and then activate the internal forced lock.

Disable Internal Forced Lock

Pressing the O/C button indoors for five seconds will trigger a series of low-pitched short sounds three times, and then deactivate the internal forced lock.

17. Alarm

Intrusion Alarm : The alarm goes off when someone forces the door open. For example, In case of an intrusion by opening a gap in the door while the door is locked.

Tampering Alarm : The alarm goes off when the front part is completely separated from the main set. For example, forced removal of external product (External Body).

Turn off alarm

- Enter the registered User code.
- Press Ⓡ button for 5 seconds.
- Enter the registered Fingerprint.
- Touch the registered RFID Key Tag.

18. 3 Minutes lock out


All access mode from the external side are disabled for 3 minutes to deter unauthorized access.

Disable 3-minute Lock Out

- Open the door with the inner Thumb-turn knob.
- Open the door with mechanical key.
- Press Ⓡ button.

19. Unlock Door with Fake Code

There is no limit to the number of digits for the fake PIN code.



Palm touch → Enter the User Code and Fake Code OR Enter the Fake Code and User Code → Palm touch

20. Emergency power supply for discharged batteries



Contact 9V battery → Palm touch → Enter the User Code and Plam touch OR Contact RFID Key Tag OR Touch fingerprint

21. Power supply


One-on-one real life size
1.5V(LR6) Alkaline AA Battery

4x New Alkaline batteries may last for 1 year with a usage of 10 times a day.


You must replace all 4 batteries in the following cases:
* The Low Battery LED on keypad flickers red.
* When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM.

22. How to install batteries

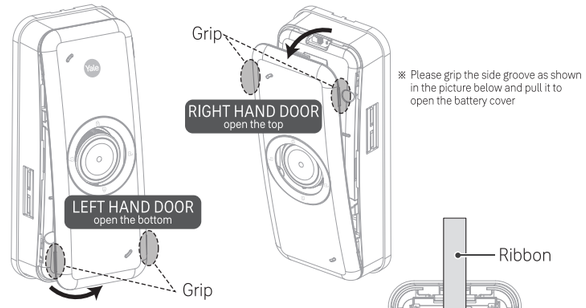


- Before installing batteries, make sure the deadbolt is unlocked.
- Place ribbon behind batteries for easy battery removal.

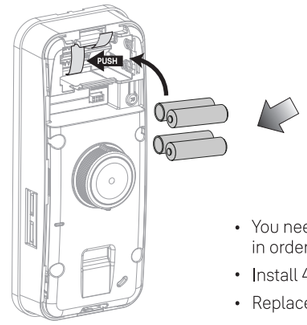

- You need to insert the batteries in order from the inside.
- Install 4 batteries.
- Replace cover.

※ Be careful not to jam your fingers when charging the battery

23. Emergency mechanical key override

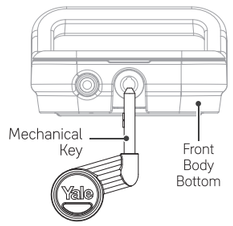

When to use the Key Override

- When the smart door lock malfunctions and unable to unlock itself.

How to use

- Insert the key into the Mechanical Key Slot.
- Push upward and hold the key to engage the key with the cylinder.
- Turn the key.

24. Safety and Warning

- Kindly ensure the secure storage of the administrator code. In the event of its loss, a factory reset (hard reset) is required. (Please contact our customer service for more information)
- Do not install the digital door lock in an outdoor environment.
- Do not attempt to disassemble the digital door lock by your self. By doing so, you may get an electronic shock and damage the product.
- Do not use force with a tool onto the product.
- Make sure to lock the door tight when you go out.
- Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.
- It is recommended to change User Code on a regular basis.
- In manual lock mode, make sure to double check whether the door is securely locked.
- Do not use rechargeable batteries. Only alkaline batteries are recommended.
- Make sure to follow the above instructions to avoid any injuries.
- The performance of the product shall not be guaranteed under unintended conditions, including but not limited to instances of water condensation and applications in seaside environments.
- Warranty will not cover- exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles.

User Guide


ByYou V Pro
(Vertical)

RFID Key Tag / Fingerprint / PIN Code / Key


Part of ASSA ABLOY




For use on residential entry doors. Not to be used where the internal escutcheon will be exposed to outdoor elements (e.g. on a gate).

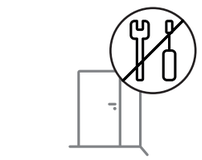


Do not attempt to disassemble the digital door lock by yourself.

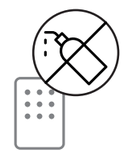


Do not spray water directly or wipe with chemicals such as benzene, gasoline or alcohol.

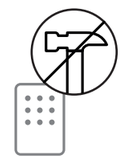

Do not use force with a tool onto the product.

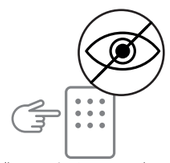

When using, remember that someone else can see the password.

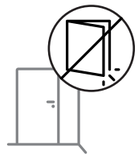

Make sure the door is closed properly when going out.

PLEASE READ INSTRUCTIONS BEFORE USE.
The functions and design of this product can be changed without prior notice for performance and quality improvement.

ISL-2223-00-004