
Bircher America, Inc.
870 Pratt Avenue N
Schaumburg, IL 60193
Tel (800)-252-1272
Fax (847)-952-2005

BIRCHER REGLOMAT
sensing the future

Sensing Edges – Installation Guide

For retainers: AP-1, AP-2, AP-4, AP-5, AP-7, AP-5L, AP-8, AP-G1, DWSALUD, DWSPVCX


1. Snap assembled edge into retainer

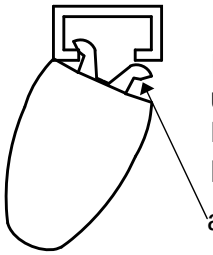

as shown on left, hook one foot into the retainer.
For **ClickLine,** snap the profile foot into the retainer. For edges over 10ft, you might use a screw driver very carefully to avoid a shortened out edge.
For **other types**, use a screw driver to push 2nd foot into the opening and then apply pressure to snap the foot section into the retainer.


apply screw driver here and then if necessary, push to snap-in foot section

2. Installing long edge

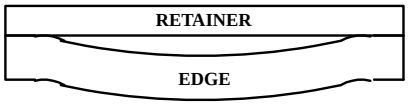

Best start from both sides and work your way towards the middle, this way you assure that the edge does not overlap the retainer at one end

3. Functional Test

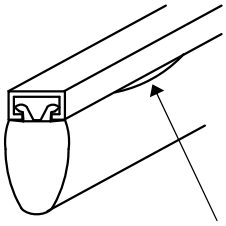

Testing the edge after installation may show a shortened out edge. Areas where the rubber is not aligned with the retainer are telltale signs that the foot section is not properly snapped in. You need to apply the screw driver again, move rubber to left and right and push upwards.



For retainers: AP-5T, DIN

Profiles ***slide*** into retainer